HOME DECORATORS

collection

BF-24670 MSL STORAGE CABINET 36"H× 42"W

INV#04638

ASSEMBLY INSTRUCTIONS

Made In China

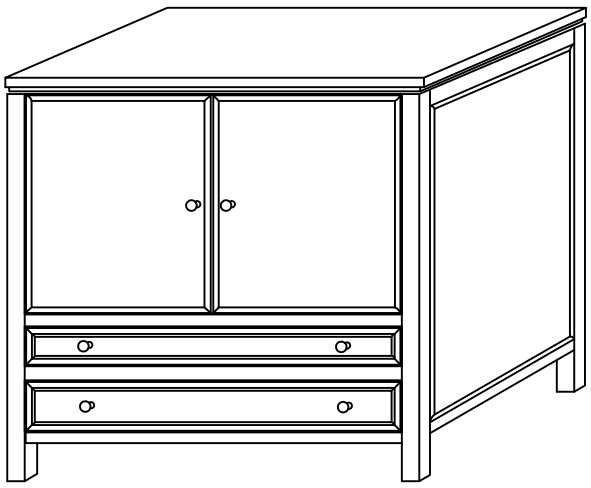

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts, which may have came loose inside the carton during shipment. Count all parts and material hardware and then compare with parts list to be sure all parts are present. If any parts are missing or damaged, phone, fax, or mail to our Customer Service Department for efficient and speedy service. Please indicate the model number and code letter of part(s) needed.

IMPORTANT NOTE: Follow instructions listed below in proper sequence as numbered to assure fast, easy and correct assembly.

PARTS LIST

A TOP PANEL-1PC	B  RIGHT SIDE PANEL-1PC	C  LEFT SIDE PANEL-1PC
D  LARGE ACROSS PANEL-1PC	E BOTTOM PANEL-1PC	F  UP BACK PANEL-1PC
G  DOWEN BACK PANEL-1PC	H  ADORNING PANEL-1PC	I  SMALL ACROSS PANEL-1PC
J  SHELF PANEL-1PC	K 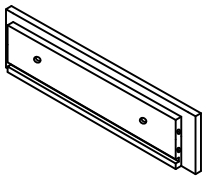 SMALL DRAWER PANEL FRONT-1PC	L 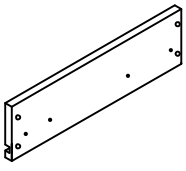 SMALL LEFT DRAWER SIDE PANEL-1PC

M 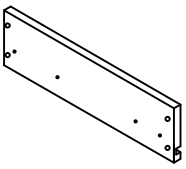 SMALL RIGHT DRAWER SIDE PANEL-1PC	N 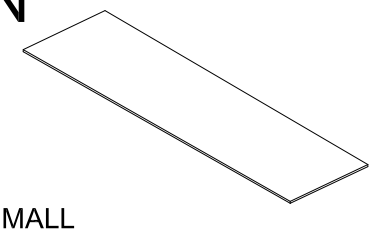 SMALL DRAWER PANEL BOTTOM-1PC	O 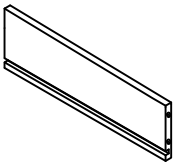 SMALL DRAWER PANEL BACK-1PC
P 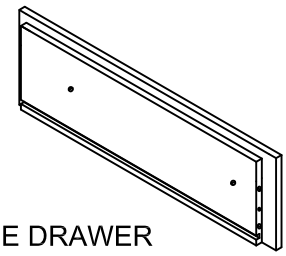 LARGE DRAWER PANEL FRONT-1PC	Q 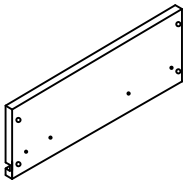 LARGE LEFT DRAWER SIDE PANEL-1PC	R 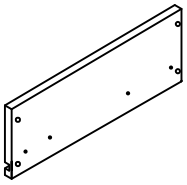 LARGE RIGHT DRAWER SIDE PANEL-1PC
S 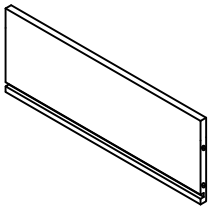 LARGE DRAWER PANEL BACK-1PC	T 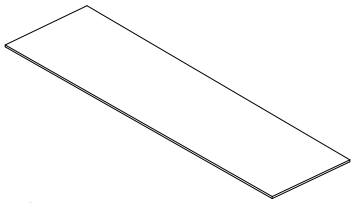 LARGE DRAWER PANEL BOTTOM-1PC	U  DRAWER SUPPORT PANELS-4PCS
V  DRAWER STAND PANELS-2PCS	W DRAWER SMALL ACROSS PANELS-4PCS	X DRAWER LARGE ACROSS PANELS-2PCS
Y 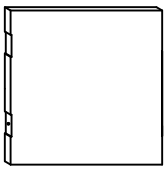 RIGHT DOOR-1PC	Z 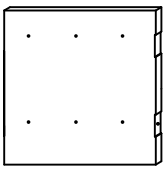 LEFT DOOR-1PC	A1  LEFT DRAWER SIDE PANELS-2PCS
B1  RIGHT DRAWER SIDE PANELS-2PCS	C1 DRAWER BACK PANELS-2PCS	D1  DRAWER PANEL BOTTOMS-2PCS

E1  DRAWER PANEL FRONT-2PCS	F1  STAND PANEL-1PC	G1 SALVER PANELS-3PCS
H1  LEFT STAND PANEL-1PC	I1  FEMALE MAGNETS-2PCS	J1 SCREWS-8PCS
K1  SCREWS-38PCS	L1 SCREWS-22PCS	M1 SCREWS-48PCS
N1 SCREWS-2PCS	O1  SCREWS-5PCS	P1  ALLEN WRENCH-1PC
Q1 KNOBS-6PCS	R1 SHELF SUPPORT-4PCS	S1 DOWELS-2PCS
T1 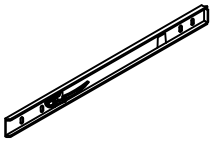 INNER SLIDES-4PCS	U1 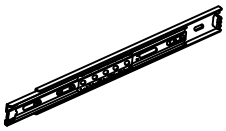 OUTER SLIDES-4PCS	V1 CAM-TOOL-1PC

W1 SCREWS-6PCS	X1  CAM-BOLTS-32PCS	Y1 CAM-LOCKS-32PCS
Z1  HINGES-4PCS	A2  LARGE MAGNETS-1PC	B2  FEET-4PCS
C2  CAM-LOCK CAPS-16PCS		

NOTE:THE SURFACE WITH THE STICKER IS THE BACK SIDE.

NOTE: • UPON OPENING THOROUGHLY CLEAN ALL WOOD SURFACES TO REMOVE DUST AND DIRT THAT MAY HAVE SETTLED ONTO THE FINISH DURING SHIPMENT IN ORDER TO PREVENT DAMAGE DURING ASSEMBLY. PLEASE ASSEMBLE THIS ITEM WITH AT LEAST TWO PEOPLE.

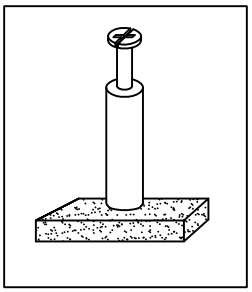

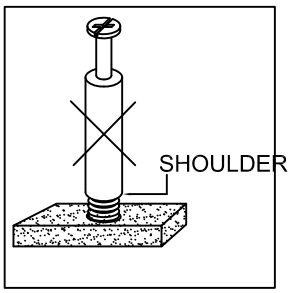

NOTE: TURN THE CAM-BOLT SCREWS UNTIL THEY ARE TIGHT, THE SHOULDER SHOULD BE AGAINST THE SURFACE OF THE PART.

HOW TO USE THE CAM-TOOL

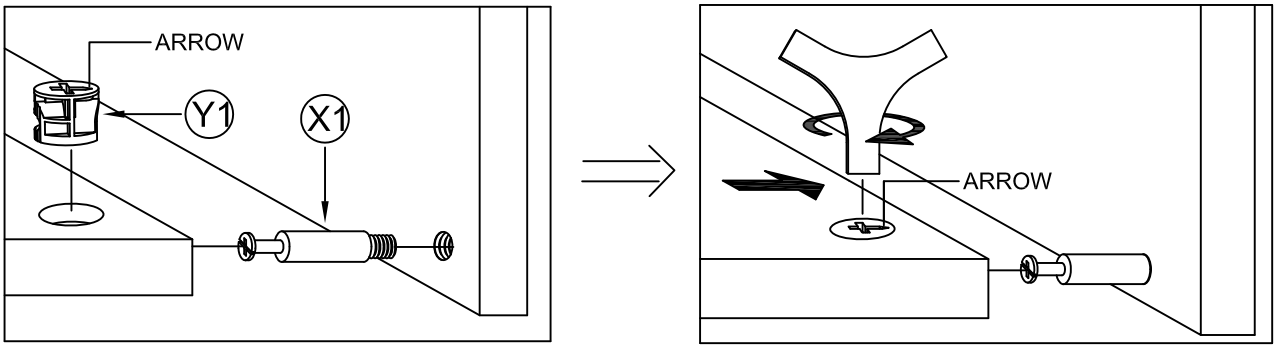

NOTE: • THE ARROWS ON THE HIDDEN CAM-LOCKS SHOULD POINT TO THE CAM-BOLTS

HOW TO SEPARATE GLIDES

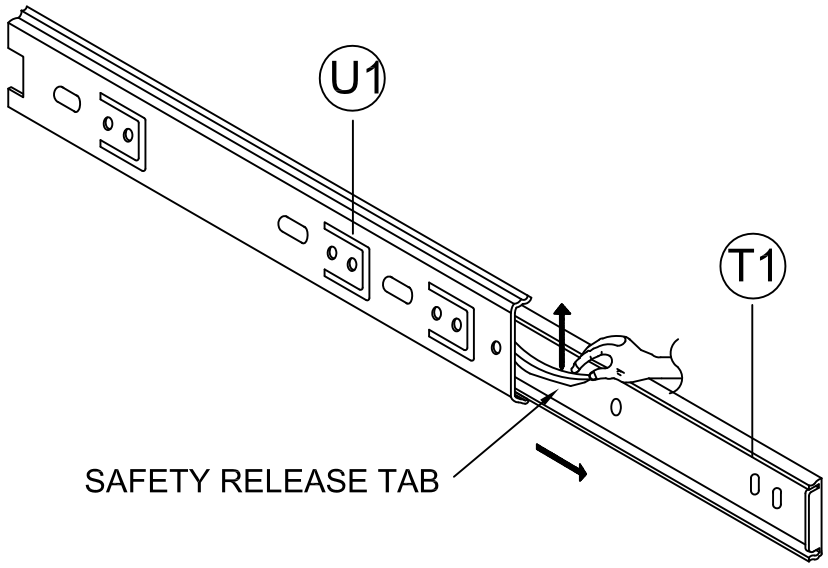

PRIOR TO ASSEMBLY, WE SUGGEST SEPARATING THE INNER GLIDES FROM THE OUTER-GLIDES, SIMPLY PULL THE LEFT/RIGHT INNER GLIDES FROM THE OUTER GLIDES EXPOSING A SMALL BLACK SAFETY RELEASE TAB, BY PUSHING THE SAFETY RELEASE TAB. YOU WILL BE ABLE TO SEPARATE THE GLIDE

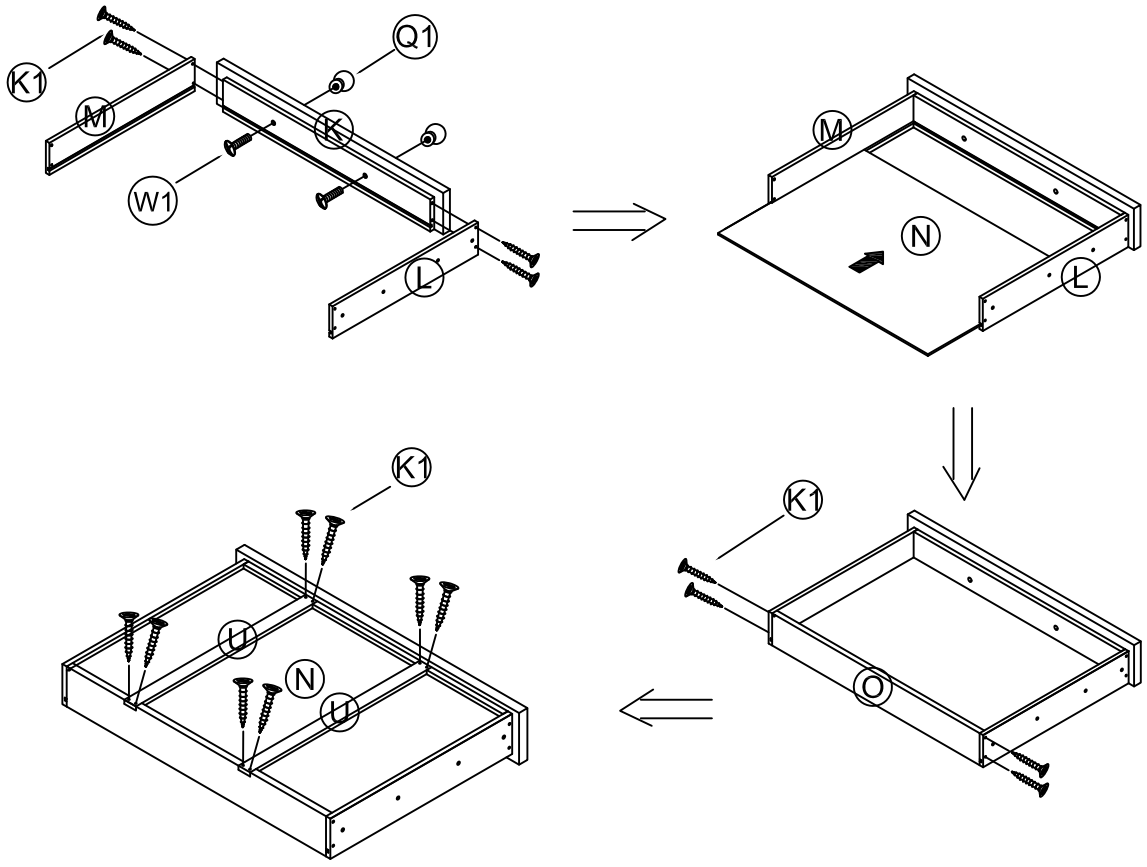

1). ASSEMBLE THE SMALL DRAWERS.

- ATTACH SMALL DRAWER PANEL SIDE(L/M) USING 4 SCREWS(K1).
- ATTACH THE 2 KNOBS(Q1) TO THE SMALL DRAWER PANEL FRONT(K) USING 2 SCREWS(W1).
- INSERT THE SMALL DRAWER BOTTOM PANEL(N) INTO THE SLOTS IN THE SMALL DRAWER PANEL SIDE(L/M).
- ATTACH SMALL DRAWER PANEL BACK(O) BETWEEN SMALL SIDE DRAWER PANELS(L/M) USING 4 SCREWS(K1).
- ATTACH 2 DRAWER SUPPORT PANELS(U) TO DRAWER BOTTOM USING 8 SCREWS(K1).

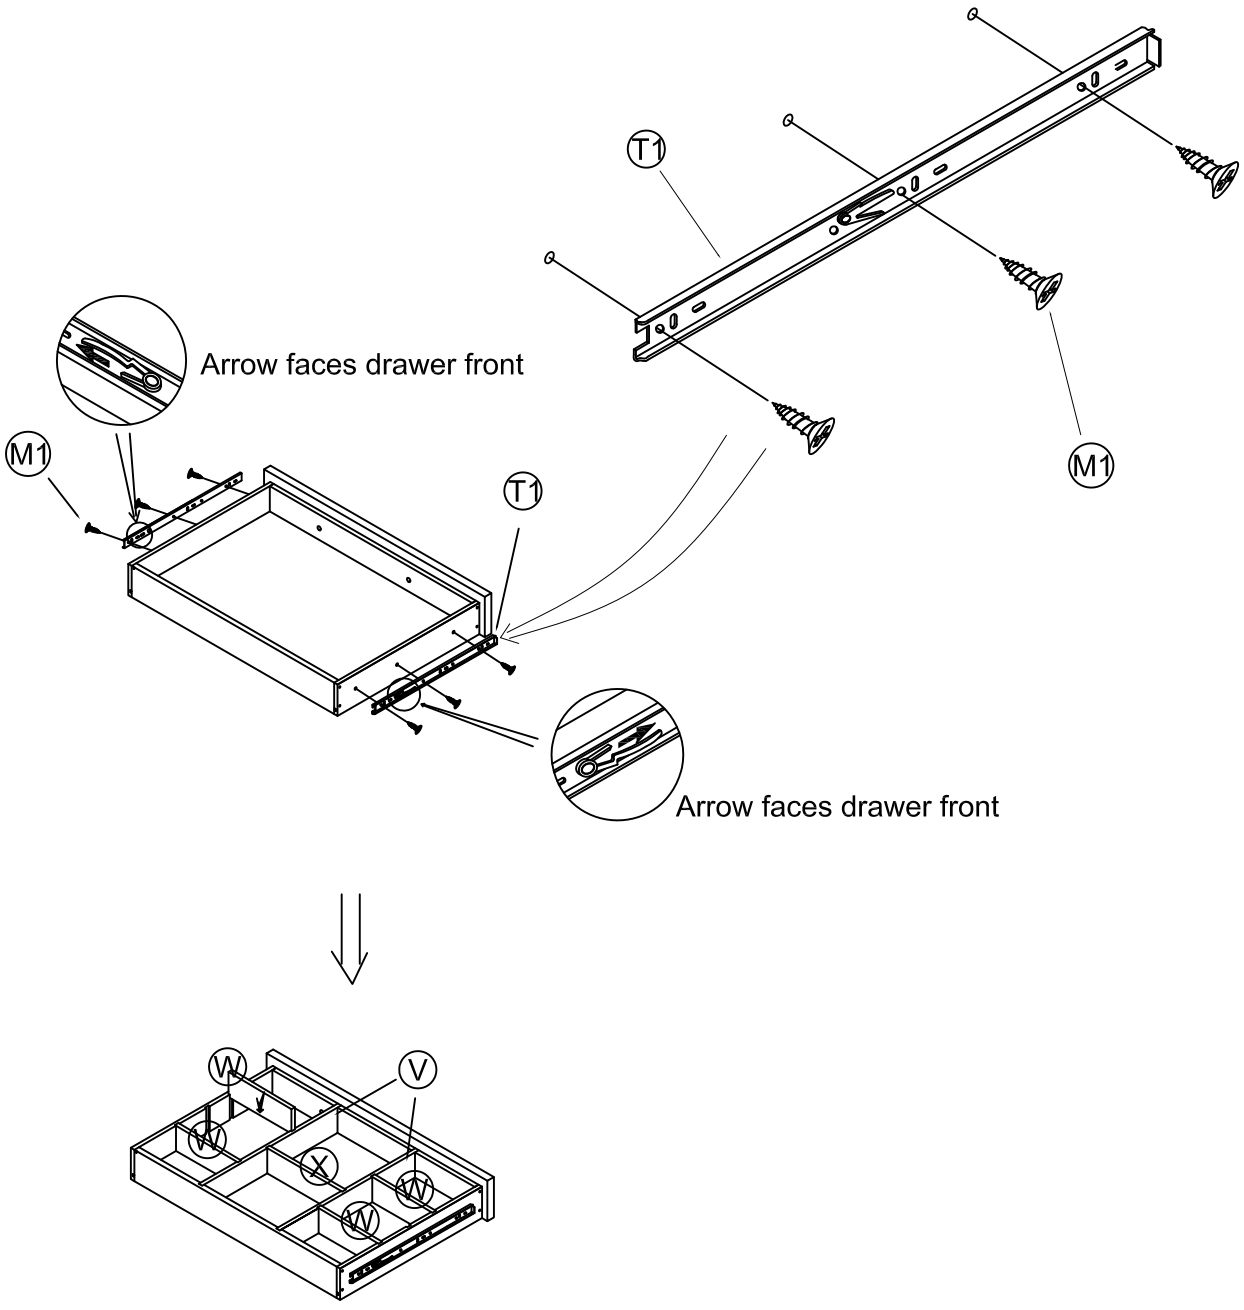

2). ASSEMBLE THE INNER SLIDES(T1) AND PANELS(V/W/X).

- ATTACH THE 2 INNER SLIDES(T1) TO SMALL DRAWER PANEL SIDE(L/M) USING 6 SCREWS(M1).
- INSERT THE PANELS(V/W/X) IN THE SMALL DRAWER.

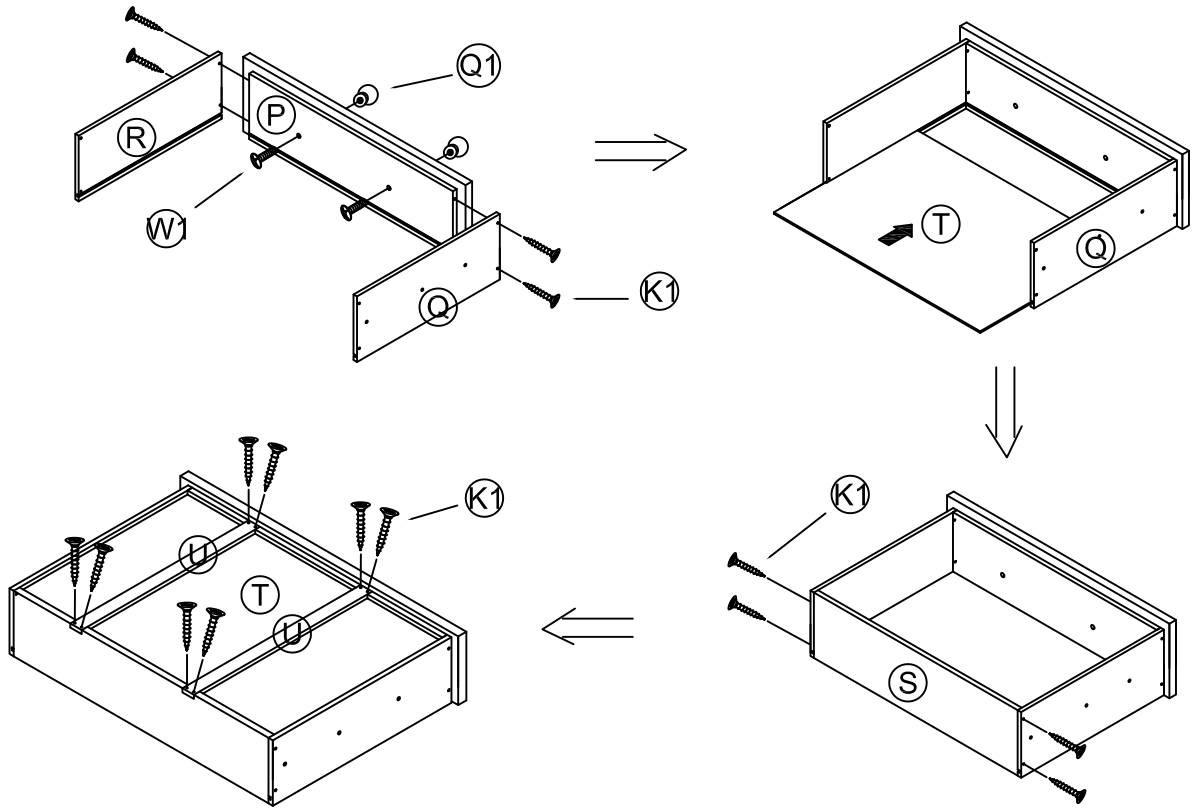

3). ASSEMBLE THE LARGE DRAWER.

- ATTACH LARGE DRAWER PANEL SIDE(Q/R) USING 4 SCREWS(K1).
- ATTACH THE 2 KNOBS(Q1) TO LARGE DRAWER PANEL FRONT(P) USING 2 SCREWS(W1).
- INSERT THE DRAWER LARGE BOTTOM PANEL(T) INTO THE SLOTS IN THE LARGE SIDE DRAWER PANELS(Q/R).
- ATTACH LARGE DRAWER PANEL BACK(S) BETWEEN LARGE SIDE DRAWER PANELS(Q/R) USING 4 SCREWS(K1).
- ATTACH 2 DRAWER SUPPORT PANELS(U) TO DRAWER BOTTOM USING 8 SCREWS(K1).

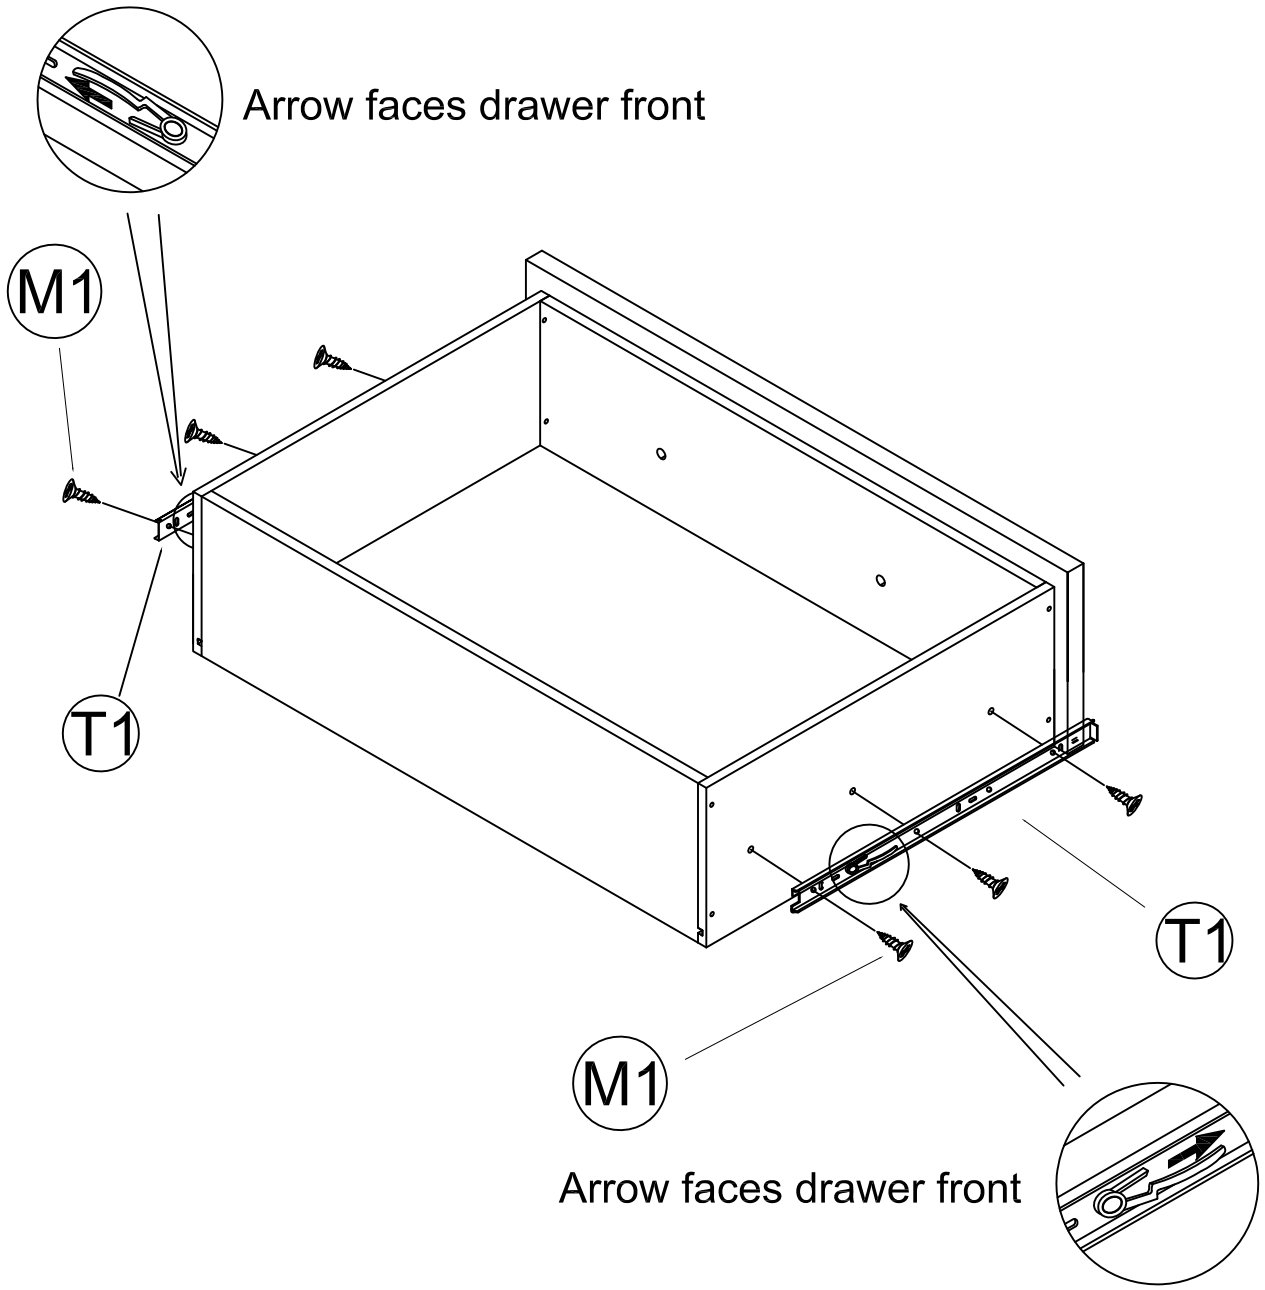

4). ASSEMBLE THE INNER SLIDES(T1).

- ATTACH THE 2 INNER SLIDES(T1) TO LARGE DRAWER PANEL SIDE(Q/R) USING 6 SCREWS(M1).

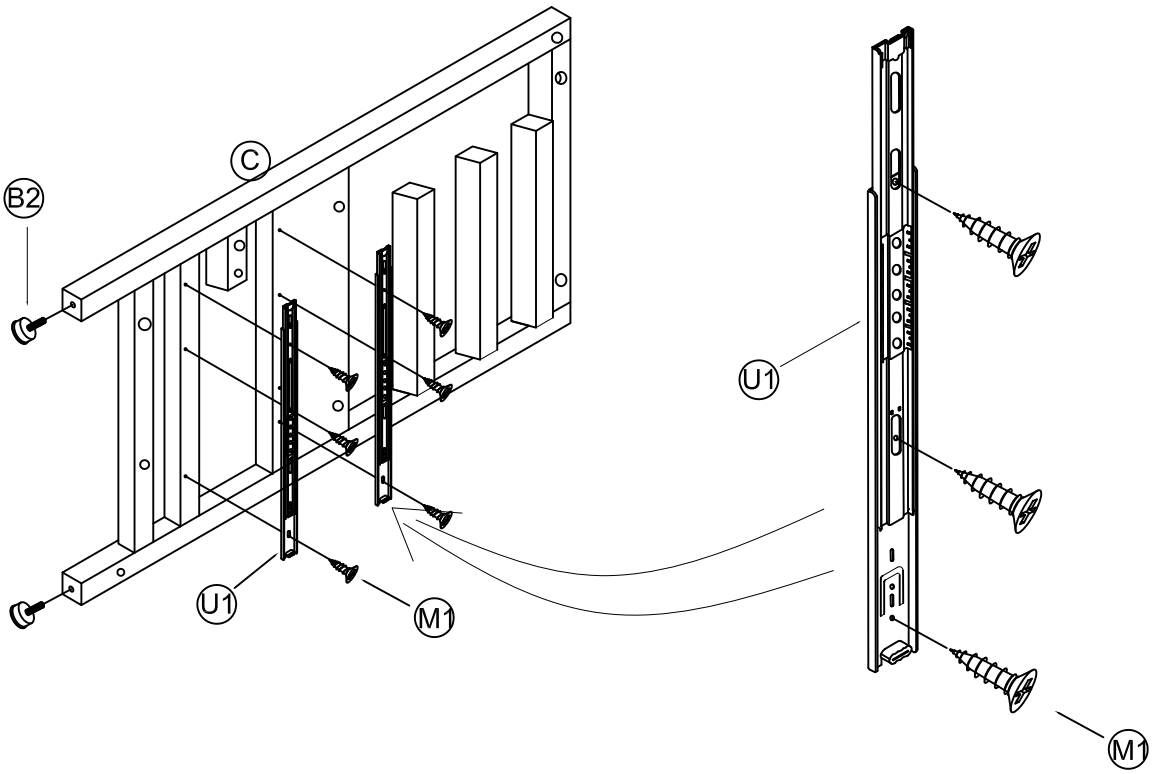

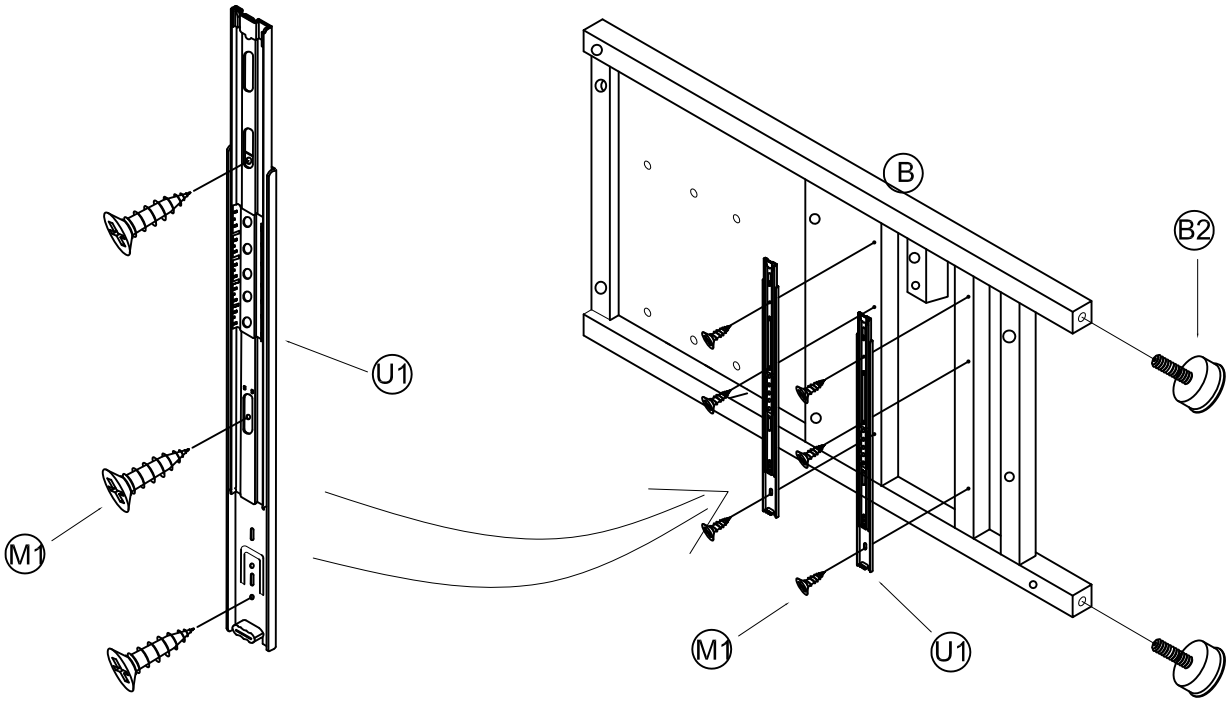

5). ASSEMBLE THE 4 OUTER SLIDES(U1) AND 4 FEET(B2).

- ATTACH 4 OUTER SLIDES(U1) TO SIDE PANELS(B/C) USING 12 SCREWS(M1).
- ROTATE THE 4 FEET(B2) INTO THE HOLES IN THE SIDE PANELS(B/C).

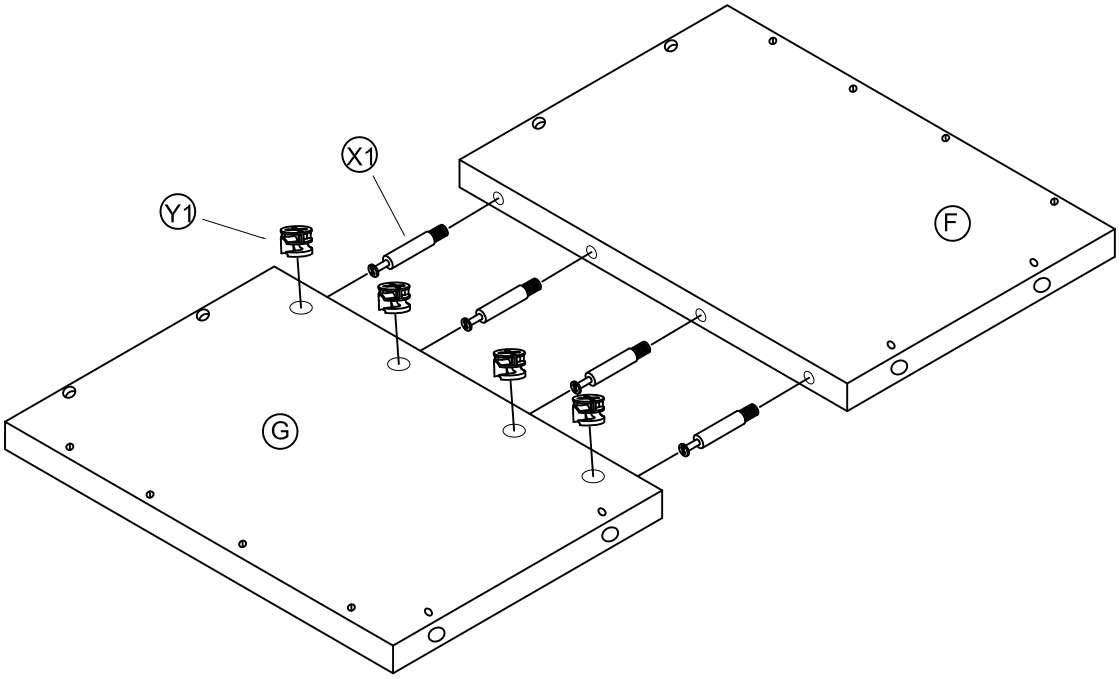

6). ASSEMBLE THE BACK PANELS(F/G).

- ROTATE THE 4 CAM-BOLTS(X1) INTO THE HOLES IN THE UP BACK PANEL(F).
- PLACE CAM-BOLTS(X1) INTO THE HOLES IN THE PANEL(G) AND ATTACH USING 4 CAM-LOCKS(Y1).

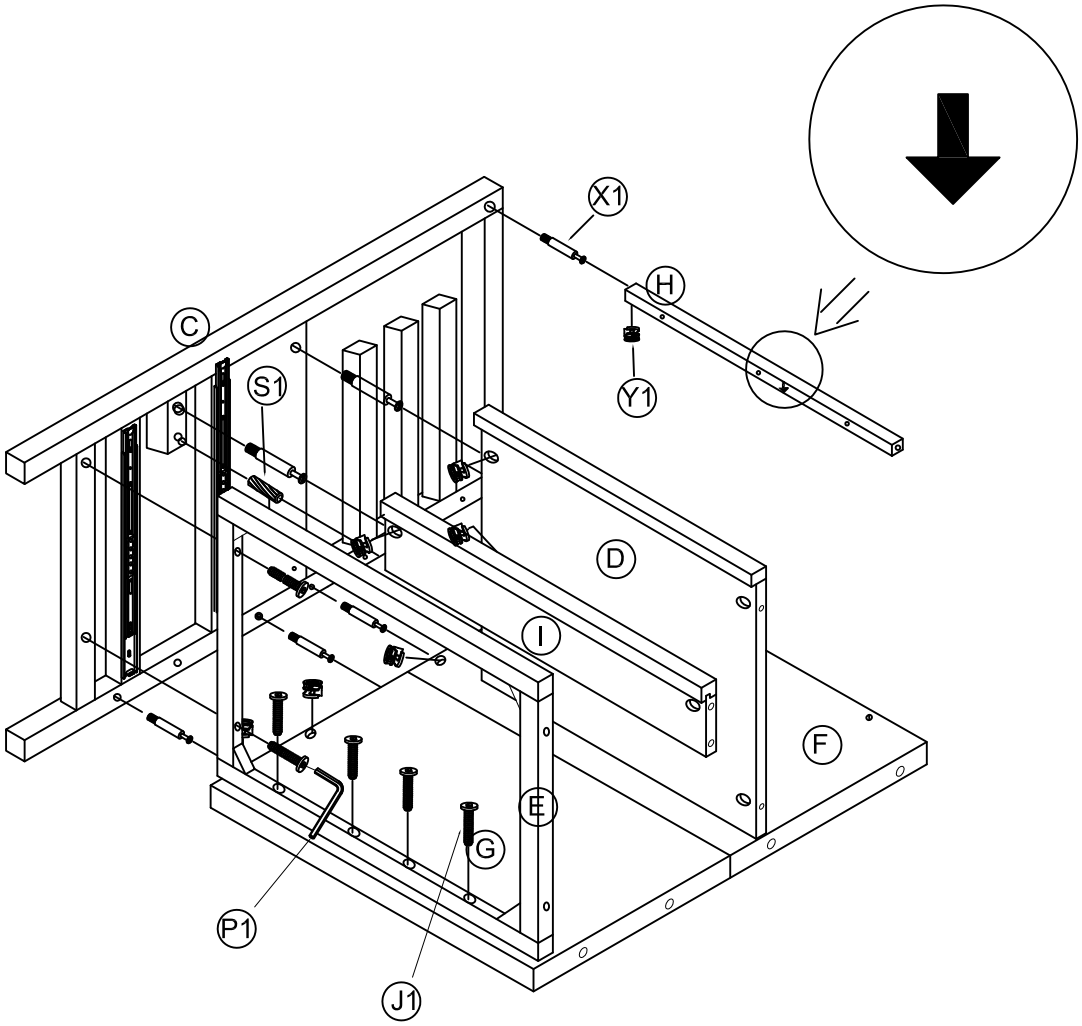

7). ASSEMBLE THE LEFT SIDE PANEL(C).

- INSERT THE 1 DOWEL(S1) INTO THE HOLE IN THE LEFT SIDE PANEL(C).
- ROTATE THE 8 CAM-BOLTS(X1) INTO THE HOLES IN THE LEFT SIDE PANEL(C).
- PLACE CAM-BOLTS(X1) INTO THE HOLES IN THE PANEL(D/ I /F/G/H) AND ATTACH USING 8 CAM-LOCKS(Y1).
- FINALLY, ATTACH THE BOTTOM PANEL(E) TO PANEL(C) USING 6 SCREWS(J1).

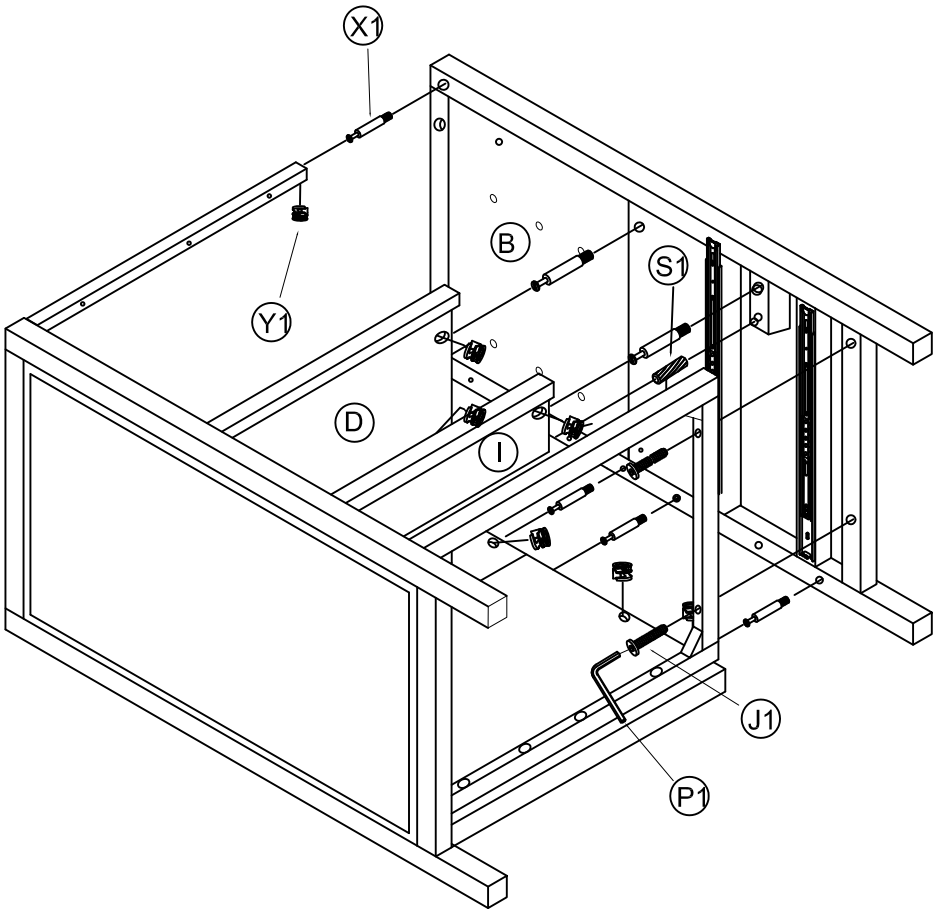

8). ASSEMBLE THE RIGHT SIDE PANEL(B).

- INSERT THE 1 DOWEL(S1) INTO THE HOLE IN THE RIGHT SIDE PANEL(B).
- ROTATE THE 8 CAM-BOLTS(X1) INTO THE HOLES IN THE RIGHT SIDE PANEL(B).
- PLACE CAM-BOLTS(X1) INTO THE HOLES IN THE PANEL(D/ I /F/G/H) AND ATTACH USING 8 CAM-LOCKS(Y1).
- FINALLY, ATTACH THE BOTTOM PANEL(E) TO PANEL(B) USING 2 SCREWS(J1).

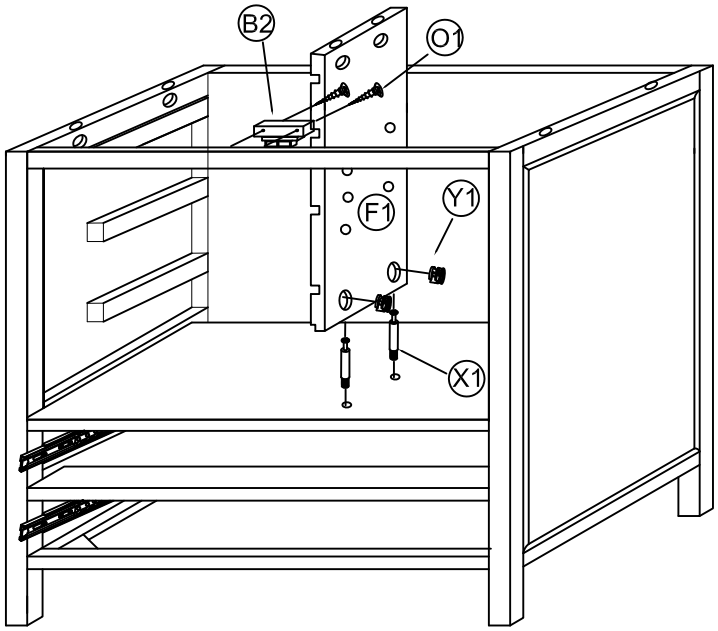

9). ASSEMBLE THE STAND PANEL(F1).

- ATTACH LARGE MAGNETS(A2) TO ADORNING PANEL(H) USING 2 SCREWS(O1).
- INSERT THE 2 CAM-BOLTS(X1) INTO THE HOLES IN THE LARGE ACROSS PANEL(D).
- PLACE CAM-BOLTS(X1) INTO THE HOLES IN PANEL(F1) AND ATTACH USING 2 CAM-LOCKS(Y1).

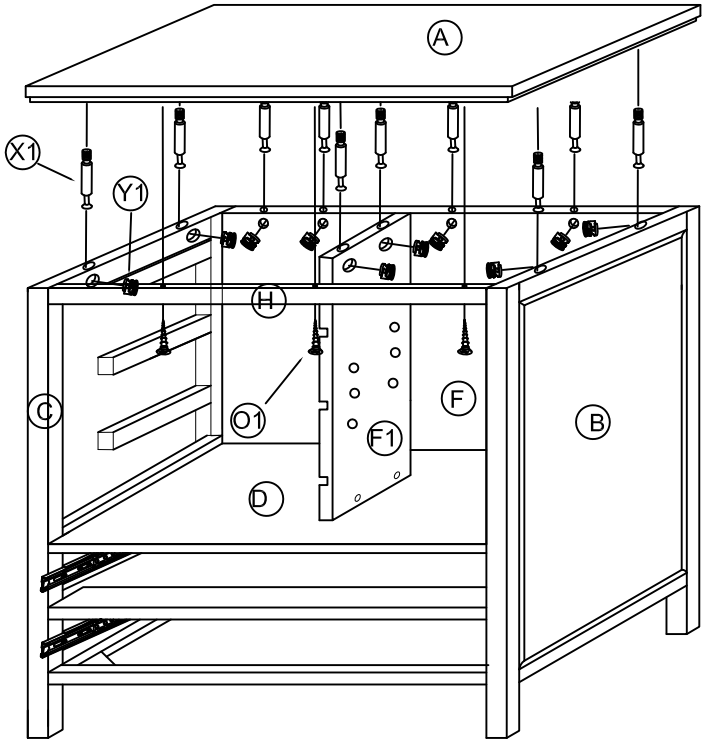

10). ASSEMBLE THE TOP PANEL(A).

- INSERT THE 10 CAM-BOLTS(X1) INTO THE HOLES IN THE TOP PANEL(A).
- PLACE CAM-BOLTS(X1) INTO THE HOLES IN PANEL(B/C/F/F1) AND ATTACH USING 10 CAM-LOCKS(Y1).
- FINALLY, ROTATE THE 3 SCREWS(O1) INTO THE HOLES IN THE ADORNING PANEL(H).

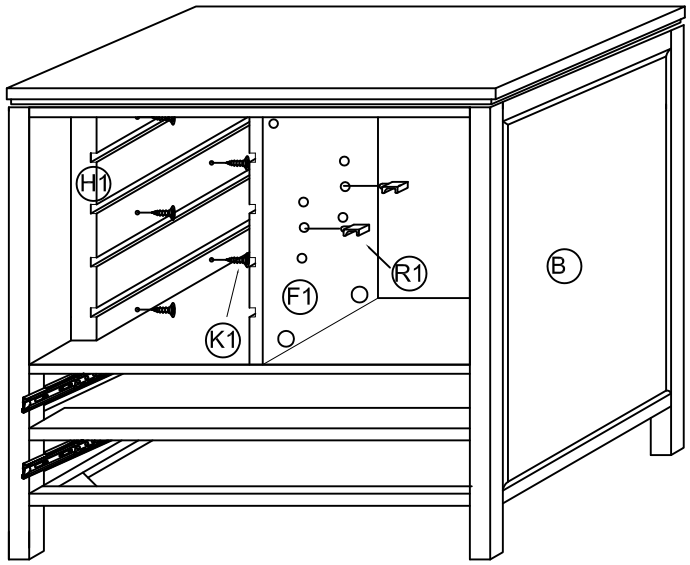

11). ASSEMBLE THE LEFT STAND PANEL(H1).

- ATTACH THE LEFT STAND PANEL(H1) TO LEFT SIDE PANEL USING 6 SCREWS(K1).
- INSERT THE 4 SHELF SUPPORTS(R1) INTO THE HOLES IN THE STAND/RIGHT SIDE PANEL(F1/B).

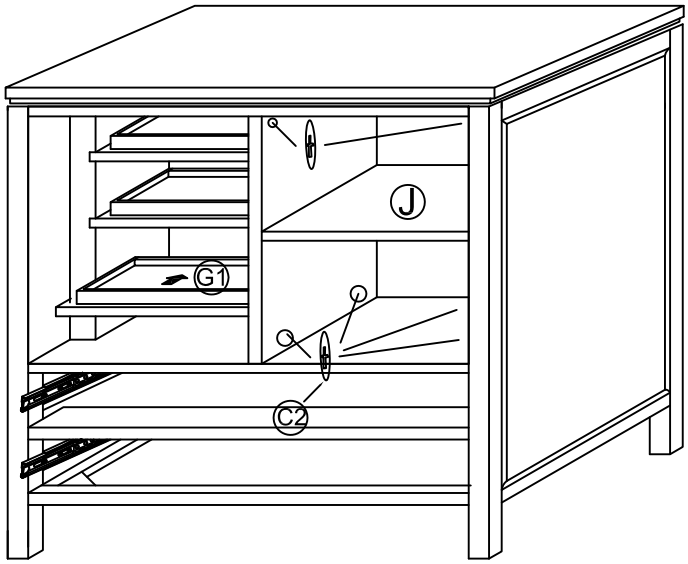

12). ASSEMBLE THE SHELF(J) AND SALVER PANEL(G1).

- PUT THE SHELF(J) ONTO THE SHELF SUPPORT(R1) AND INSERT SALVER PANELS(G1) INTO GROOVE IN PANEL （H1/F1）.
- ATTACH THE 16 CAM-LOCKS(Y1) USING 16 CAM-LOCKS CAP(C2).

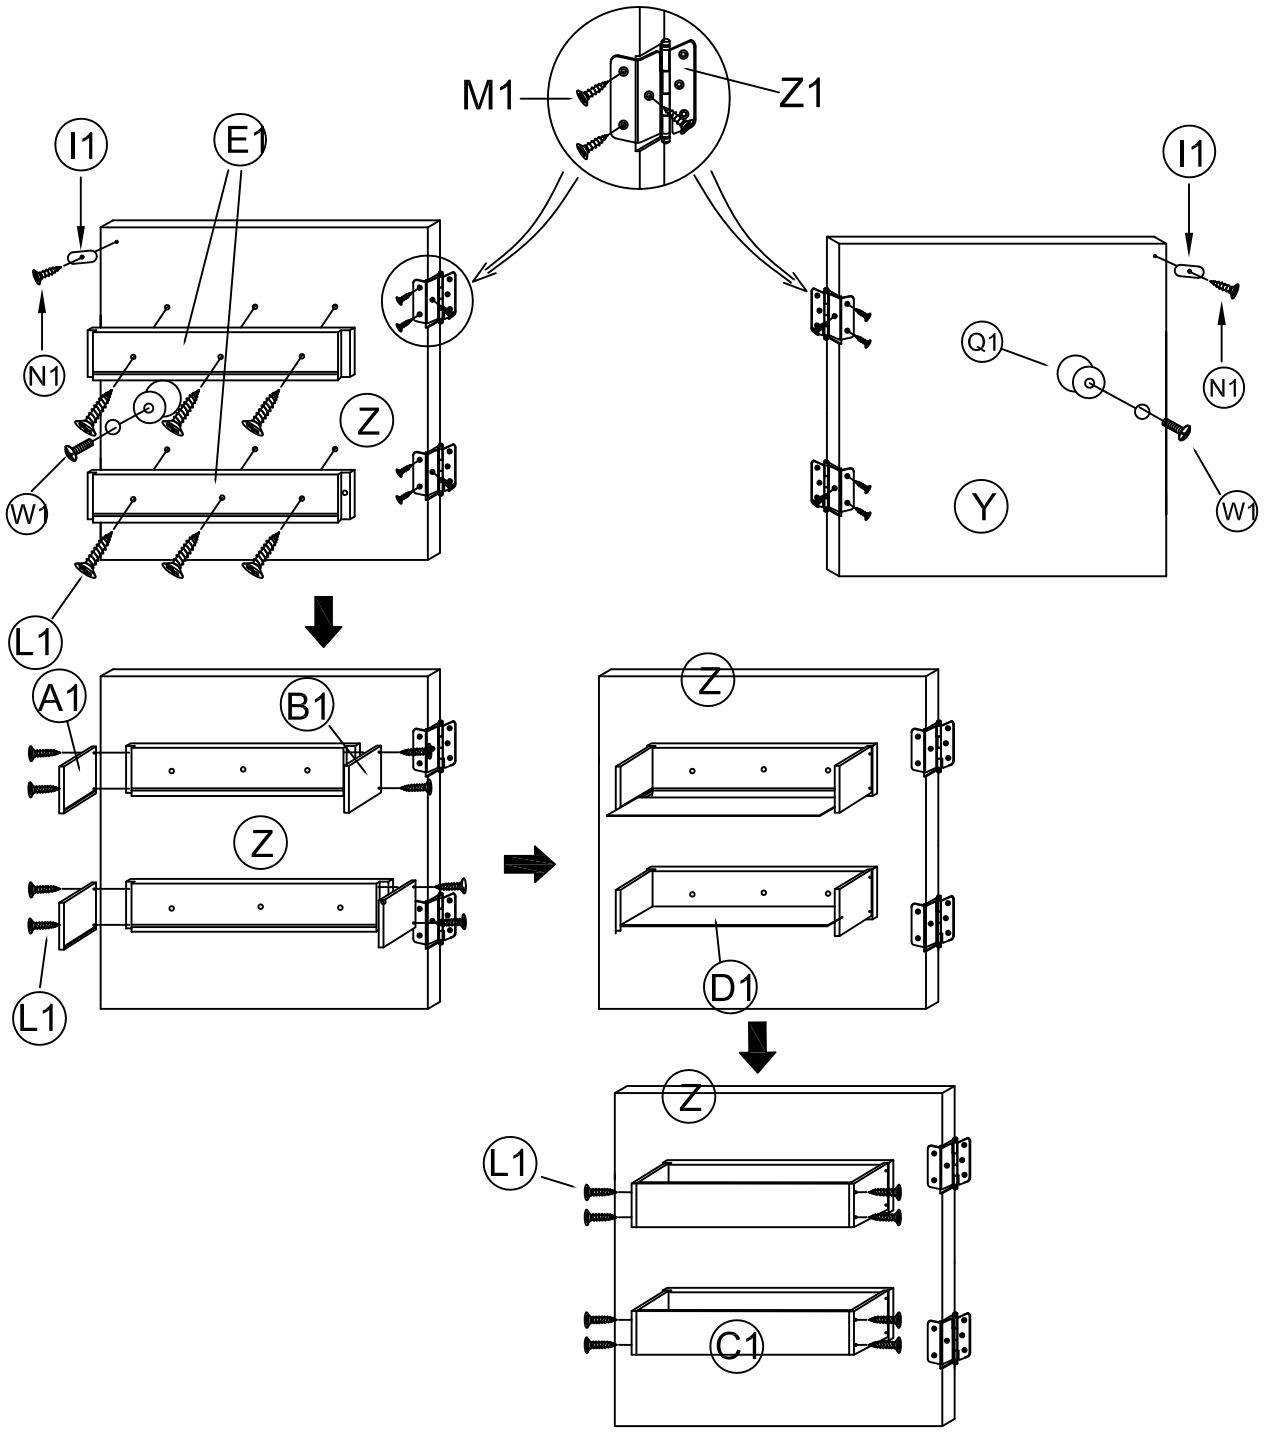

13). ASSEMBLE THE DOOR(Y/Z).

- ATTACH 2 KNOBS(Q1) TO DOORS(Y/Z) USING 2 SCREWS(W1).
- ATTACH THE 2 FEMALE MAGNETS(I1) TO DOORS(Y/Z) USING 2 SCREWS(N1).
- ATTACH THE 4 HINGES(Z1) TO DOORS(Y/Z) USING 12 SCREWS(M1).
- ATTACH THE DRAWER PANEL FRONT(E1) TO DOOR(Z) USING 3 SCREWS(L1).
- ATTACH DRAWER PANEL SIDE(A1/B1) USING 4 SCREWS(L1).
- INSERT THE DRAWER PANEL BOTTOM(D1) INTO THE SLOTS IN THE SIDE DRAWER PANELS(A1/B1).
- ATTACH DRAWER PANEL BACK(C1) BETWEEN DRAWER SIDE PANELS(A1/B1) USING 4 SCREWS(L1).

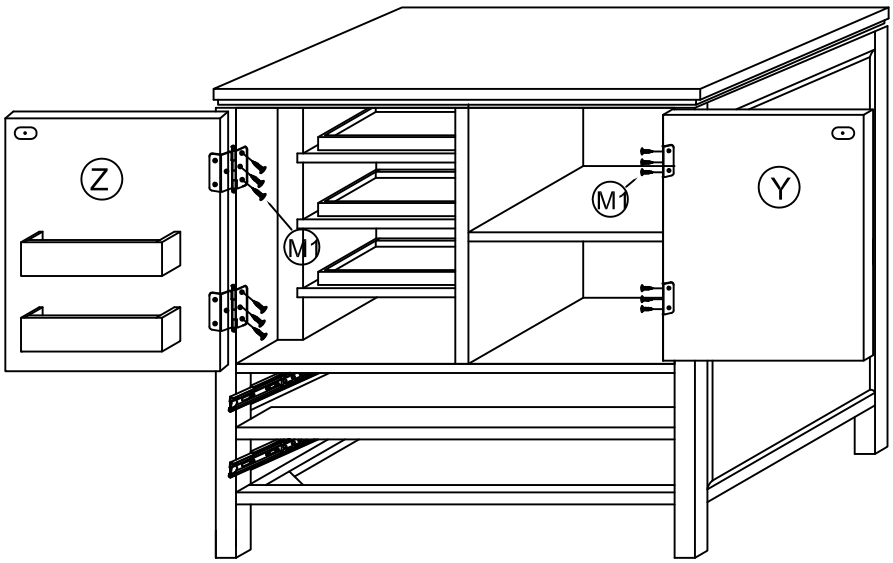

14). ASSEMBLE THE DOORS(Y/Z).

- ATTACH THE DOORS(Y/Z) TO SIDE PANELS(B/C) USING 12 SCREWS(M1).

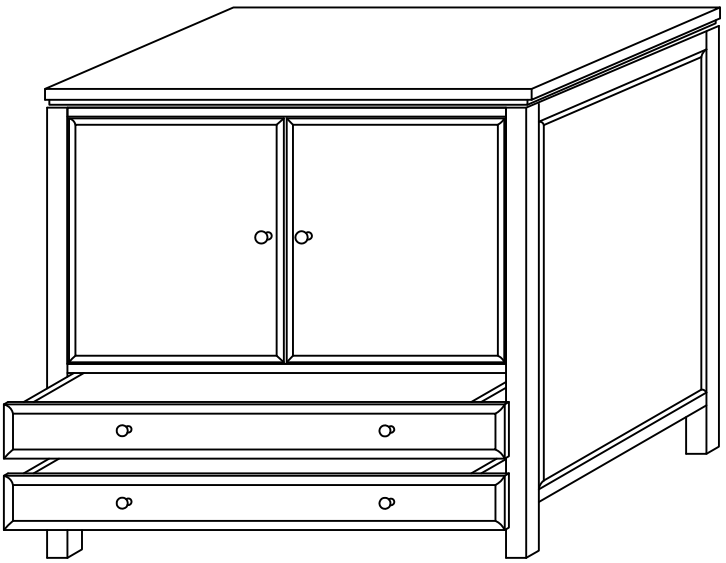

15). ASSEMBLE THE DRAWER.

- INSERT THE 2 DRAWER INNER SLIDES(T1) TO OUTER SLIDES(U1).